

FATEC

Mitsubishi Programmable Controllers Training Manual MELSEC iQ-R Series Basic Course (for GX Works3)

SAFETY PRECAUTION

(Always read these instructions before using the products.)

When designing the system, always read the relevant manuals and give sufficient consideration to safety.
During the exercise, pay full attention to the following points and handle the product correctly.

[EXERCISE PRECAUTIONS]

WARNING

- Do not touch the terminals while the power is on to prevent electric shock.
 - Before opening the safety cover, turn off the power or ensure the safety.
 - Do not touch the movable portion.
-

CAUTION

- Follow the instructor's direction during the exercise.
 - Do not remove the module of the demonstration machine or change wirings without permission.
Doing so may cause failures, malfunctions, personal injuries and/or a fire.
 - Turn off the power before mounting or removing the module.
Failure to do so may result in malfunctions of the module or electric shock.
 - When the demonstration machine (such as X/Y table) emits abnormal odor/sound, press the "Power switch" or "Emergency switch" to turn off.
 - When a problem occurs, notify the instructor as soon as possible.
-

MEMO

REVISIONS

*The text number is given on the bottom left of the back cover.

Revision date	*Manual number	Description
February 2016	SH(NA)-081898ENG-A	First edition

This manual confers no industrial property rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2016 MITSUBISHI ELECTRIC CORPORATION

MEMO

CONTENTS

SAFETY PRECAUTION	A - 1
REVISIONS	A - 3
INTRODUCTION	A - 9
RELEVANT MANUALS	A - 9
CHAPTER 1 BASICS OF A PROGRAMMABLE CONTROLLER	1 - 1
1.1 Programming Languages	1 - 1
1.2 Program	1 - 2
1.3 System Configuration	1 - 6
1.3.1 Overall configuration	1 - 6
1.4 Memory Configuration of the CPU Module	1 - 11
1.5 External I/O Signals and I/O Numbers	1 - 13
1.6 System Configuration and I/O Numbers of the Demonstration Machine	1 - 17
CHAPTER 2 OPERATING GX Works3	2 - 1
2.1 Main Functions of GX Works3	2 - 1
2.2 Operations Before Creating a Ladder Program	2 - 4
2.2.1 Starting GX Works3	2 - 4
2.2.2 Creating a new project	2 - 5
2.3 Preparations for Stating the CPU Module	2 - 8
2.3.1 Installing a battery	2 - 9
2.3.2 Inserting or removing an extended SRAM cassette	2 - 9
2.3.3 Inserting and removing an SD memory card	2 - 11
2.3.4 Specifying connection destination	2 - 12
2.3.5 Initializing the CPU module	2 - 15
2.3.6 Clearing the error history of CPU module	2 - 18
2.3.7 Setting the clock of the CPU module	2 - 19
2.4 Creating a Ladder Program	2 - 20
2.4.1 Creating a ladder program by entering devices and labels	2 - 21
2.4.2 Creating a ladder program with function keys	2 - 24
2.4.3 Creating a ladder program with tool buttons	2 - 27
2.5 Converting a Created Ladder Program	2 - 30
2.6 Reading/Writing Data from/to the Programmable Controller CPU	2 - 31
2.6.1 Writing data to the CPU module	2 - 33
2.6.2 Reading data from the CPU module	2 - 35
2.7 Monitoring the Ladder	2 - 37
2.8 Diagnosing the Programmable Controller CPU	2 - 40
2.9 Editing a Ladder Program	2 - 42
2.9.1 Modifying a part of a ladder program	2 - 42
2.9.2 Drawing a line	2 - 44
2.9.3 Deleting a line	2 - 46
2.9.4 Inserting a row	2 - 47
2.9.5 Deleting a row	2 - 49
2.9.6 Cutting or copying a ladder	2 - 50
2.10 Verifying Data	2 - 52
2.11 Saving a Created Ladder Program	2 - 54
2.11.1 Saving a program in the single file format	2 - 54
2.11.2 Saving a program in the workspace format	2 - 55

2.12	Opening a Saved Project	2 - 57
2.13	Opening a Project in Another Format	2 - 58

CHAPTER 3 DEVICES AND PARAMETERS OF A PROGRAMMABLE CONTROLLER 3 - 1

3.1	Devices	3 - 1
3.2	Parameters	3 - 3

CHAPTER 4 SEQUENCE INSTRUCTIONS AND BASIC INSTRUCTIONS -PART 1- 4 - 1

4.1	Instructions Described in This Chapter	4 - 1
4.1.1	Instructions not described in this chapter -Part 1-	4 - 2
4.1.2	Instructions not described in this chapter -Part 2-	4 - 3
4.2	Differences Between [OUT] and [SET]/[RST]	4 - 4
4.2.1	[OUT] (Coil output)	4 - 4
4.2.2	[SET]/[RST](Setting/resetting devices)	4 - 5
4.3	Measuring Timers (Timer, High-speed Timer, Retentive Timer)	4 - 6
4.4	Counting with a Counter	4 - 9
4.5	[PLS] (Turning on a Specified Device for One Scan at the Rising Edge of an Input Condition) [PLF] (Turning on a Specified Device for One Scan at the Falling Edge of an Input Condition)	4 - 19
4.6	[CJ] (Conditional Jump of the Non-Delay Execution Type) [SCJ] (Conditional Jump Executed After One Scan)	4 - 25
4.7	Exercise	4 - 30
4.7.1	Exercise 1	4 - 30
4.7.2	Exercise 2	4 - 31
4.7.3	Exercise 3	4 - 33

CHAPTER 5 BASIC INSTRUCTIONS -PART 2- 5 - 1

5.1	Notation of Values (Data)	5 - 1
5.2	Transfer Instructions	5 - 10
5.2.1	[MOV(P)] (Transferring 16-bit data)	5 - 10
5.2.2	[FMOV(P)] (Transferring the same data in a batch) [BMOV(P)] (Transferring block data in a batch)	5 - 18
5.3	Comparison Operation Instructions	5 - 23
5.4	Arithmetic Operation Instructions	5 - 27
5.4.1	[+(P)] (Addition of 16-bit binary data) [-(P)] (Subtraction of 16-bit binary data)	5 - 27
5.4.2	[*(P)] (Multiplication of 16-bit binary data) [/ (P)] (Division of 16-bit binary data)	5 - 30
5.4.3	32-bit data instructions and their necessities	5 - 35
5.5	External Setting of Timer/Counter Values and External Display of Current Values	5 - 38
5.6	Exercise	5 - 40
5.6.1	[Exercise 1] MOV-1	5 - 40
5.6.2	[Exercise 2] MOV-2	5 - 41
5.6.3	[Exercise 3] Comparison instruction	5 - 42
5.6.4	[Exercise 4] +, -	5 - 43
5.6.5	[Exercise 5] *, /	5 - 44
5.6.6	[Exercise 6] D*, D/	5 - 45

CHAPTER 6 HOW TO USE OTHER FUNCTIONS 6 - 1

6.1	Online Test Function	6 - 1
-----	----------------------------	-------

6.1.1	Forced on/off of the device (Y)	6 - 2
6.1.2	Setting/resetting of the device (M)	6 - 2
6.1.3	Current value change of the device (T)	6 - 3
6.1.4	Reading error steps	6 - 4
6.1.5	Remote RUN/STOP	6 - 5
6.2	Creating the Module Configuration	6 - 7
6.3	Device Batch Replacement	6 - 10
6.3.1	Replacing device numbers in a batch	6 - 10
6.3.2	Changing normally open contacts ↔ normally closed contacts of specified devices in a batch	6 - 12
6.4	Online Change	6 - 14
6.5	Watch Window	6 - 15
6.6	How to Create Comments	6 - 16

CHAPTER 7 NEW FUNCTIONS OF MELSEC iQ-R/GX Works3 **7 - 1**

7.1	Features of MELSEC iQ-R	7 - 1
7.2	Differences Between the MELSEC-Q Series and the MELSEC iQ-R Series	7 - 4
7.3	Functions of GX Works3	7 - 5

APPENDICES **App. - 1**

Appendix 1	I/O Control Mode	App. - 1
Appendix 1.1	Direct mode	App. - 1
Appendix 1.2	Refresh mode	App. - 2
Appendix 1.3	Comparisons between direct mode and refresh mode	App. - 3
Appendix 2	List of Special Relay Areas	App. - 4
Appendix 3	List of Special Register Areas	App. - 5
Appendix 4	Program Examples	App. - 6
Appendix 4.1	Flip-flop ladder	App. - 6
Appendix 4.2	One-shot ladder	App. - 8
Appendix 4.3	Long-time timer	App. - 9
Appendix 4.4	Off delay timer	App. - 10
Appendix 4.5	On delay timer (momentary input)	App. - 11
Appendix 4.6	On/off repeat ladder	App. - 11
Appendix 4.7	Preventing chattering inputs	App. - 11
Appendix 4.8	Ladder with common lines	App. - 12
Appendix 4.9	Time control program	App. - 13
Appendix 4.10	Clock ladder	App. - 14
Appendix 4.11	Star-delta starting of an electric motor	App. - 16
Appendix 4.12	Displaying the elapsed time and outputting before time limit	App. - 17
Appendix 4.13	Retentive timer	App. - 18
Appendix 4.14	Switching timer setting values with external switches	App. - 19
Appendix 4.15	Setting a counter with external switches	App. - 20
Appendix 4.16	Measuring the operating time	App. - 22
Appendix 4.17	Measuring the cycle time	App. - 22
Appendix 4.18	Application example of (D)CML(P)	App. - 23
Appendix 4.19	Dolly line control	App. - 24
Appendix 4.20	Compressor sequential operation with ring counters	App. - 26
Appendix 4.21	Application example to a positioning control	App. - 30
Appendix 4.22	Application example using the index register (Z)	App. - 31
Appendix 4.23	Application example of FIFO instructions	App. - 33
Appendix 4.24	Application example of data shifting	App. - 36

Appendix 4.25	Program example: Square root operations	App. - 39
Appendix 4.26	Program example: Multiplication with the nth power	App. - 40
Appendix 4.27	Displaying the number of failures and failure number in a failure detection program	App. - 41
Appendix 5	Memory and Files to be Handled by the CPU Module	App. - 45
Appendix 6	Checking and Setting Shortcut Keys	App. - 47
Appendix 7	Index Modification	App. - 48
Appendix 8	FB (Function Block)	App. - 51
Appendix 8.1	FB	App. - 51
Appendix 8.1.1	FB conversion	App. - 52
Appendix 8.1.2	Advantages of using FBs	App. - 53
Appendix 8.1.3	FB library	App. - 56
Appendix 8.1.4	Precautions for using FBs	App. - 58
Appendix 8.2	Creating a program using FBs	App. - 59

INTRODUCTION

This textbook describes a programmable controller, the methods of editing a program with GX Works3, sequence instructions and standard functions/function blocks for helping users to understand the programming for the MELSEC iQ-R series.

RELEVANT MANUALS

Manual name [manual number]	Description	Available form
MELSEC iQ-R CPU Module User's Manual (Startup) [SH-081263ENG]	Performance specifications, procedures before operation, and troubleshooting of the CPU module	e-Manual EPUB PDF
MELSEC iQ-R CPU Module User's Manual (Application) [SH-081264ENG]	Memory, functions, devices, and parameters of the CPU module	e-Manual EPUB PDF
MELSEC iQ-R Programming Manual (Program Design) [SH-081265ENG]	Program specifications such as of ladder programs and ST programs, and labels	e-Manual EPUB PDF
MELSEC iQ-R Programming Manual (Instructions, Standard Functions/Function Blocks) [SH-081266ENG]	Instructions for the CPU module, instructions dedicated for intelligent function modules, and standard functions/function blocks	e-Manual EPUB PDF
MELSEC iQ-R Module Configuration Manual [SH-081262ENG]	System configuration, specifications, mounting, wiring, and maintenance and inspection required for using the MELSEC iQ-R series programmable controller	e-Manual EPUB PDF
GX Works3 Operating Manual [SH-081215ENG]	System configuration of GX Works3, parameter setting, and operation method of the online function	e-Manual EPUB PDF

Point

e-Manual refers to the Mitsubishi FA electronic book manuals that can be browsed using a dedicated tool.

e-Manual has the following features:

- Required information can be cross-searched in multiple manuals.
- Other manuals can be accessed from the links in the manual.
- The hardware specifications of each part can be found from the product figures.
- Pages that users often browse can be bookmarked.